



**Fig. 27: PRESTIGE Excellence Internal Components**

Item	Part No.	Description
1	PSRKIT01	Heat Exchanger Body
2	PSRKIT02	Vent Outlet Adapter
3	PSRKIT03	Combustion Air Inlet Adapter
4	PSRKIT04	NTC Sensor (NTC1, NTC2 and NTC5) (Not shown)
5	PGRKIT20	LWCO Pressure Device
6	PSRKIT05	Condensate Drain Assembly (Not shown)
7	PSRKIT51	Boiler Piping - Return Assembly
8	PSRKIT52	Boiler Piping - Supply Outlet Assembly
9	PSRKIT53	Boiler Piping - Supply Long Assembly
10	PSRKIT54	Boiler Piping - Supply Short Assembly
11	PSRKIT55	Boiler Piping - Relief Valve Assembly
12	HMVCIR02	Circulator
13	PSRKIT17	Pressure Gauge and Fitting
14	PSRKIT56	Excellence Water Heater Tank
15	PSRKIT57	Valve Actuator